



ISOMAG

The friendly magmeter

DATA SHEET

MV210




CE

ISOIL 
INDUSTRIA

INDEX





TECHNICAL DATA	3
OVERALL DIMENSIONS	4
OVERALL DIMENSIONS (STAINLESS STEEL VERSION)	7
MV210 EXPLODED LAYOUT	9
MV210 CONSTRUCTION (STAINLESS STEEL VERSION)	10
MAIN PAGES VISUALISATION	11
ELECTRICAL CONNECTIONS	12
DIGITAL INPUT	13
DIGITAL OUTPUTS	13
ANALOG OUTPUTS	14
FUNCTIONS MENU	15
ACCURACY	20
HOW TO ORDER	21

TECHNICAL DATA

OVERALL FEATURES	
Suitable For	<input type="checkbox"/> All the ISOMAG® sensors
Minimum conductivity	<input type="checkbox"/> 5 µS/cm
Altitude	<input type="checkbox"/> -200 m up to 4000 m
Ambient Temperature	<input type="checkbox"/> -20... +60°C / -4... +140 °F - Aluminium housing <input type="checkbox"/> -10... +50°C / 14... +122 °F - Reinforced Nylon
Humidity Range	<input type="checkbox"/> 0÷100%
STANDARD FEATURES	
Housing materials	<input type="checkbox"/> Painted Aluminium die casting <input type="checkbox"/> Nylon reinforced with 15% of fiber glass <input type="checkbox"/> AISI304 Stainless Steel
Protection Rate	<input type="checkbox"/> IP 67
Power Supply/Consumption	<input type="checkbox"/> 100-240 V~ (20VA) – 44-66 Hz
Cable Gland	<input type="checkbox"/> N° 5 cable gland PG 11
Full scale value	<input type="checkbox"/> 0,4...10m/s
Dig. Input	<input type="checkbox"/> N°1 , programmable function (i.e. Totalizer reset)
Data Storage	<input type="checkbox"/> Values storing system in case of power failure
Galvanic Isolation	<input type="checkbox"/> All the inputs/outputs are galvanically isolated from power supply up to 250 V
Programming Plug In	<input type="checkbox"/> USB port for the connection to PC (USB cable type A/USB MINI B is required for the programming)
Bi-Directional	<input type="checkbox"/> Yes
Diagnostic Funct.	<input type="checkbox"/> Yes
Empty Pipe Detect.	<input type="checkbox"/> Yes
Batching Funct.	<input type="checkbox"/> Yes
CE Certification	<input type="checkbox"/> Yes
OPTIONAL FEATURES (CHECK HOW TO ORDER, AT LAST PAGE, FOR MORE DETAILS)	
Version	<input type="checkbox"/> Compact <input type="checkbox"/> Separate
Protection Rate	<input type="checkbox"/> IP 68
Conn. Sensor Cable	<input type="checkbox"/> CABLE C015/C016 for separate version
LCD Display	<input type="checkbox"/> Graphic display 128x64 pixels back light, 3 programming keys
Power Supply/Consumption	<input type="checkbox"/> Power supply : 100 ... 240 VAC 44/66 Hz <input type="checkbox"/> Power supply : 24 ... 36 VAC/VDC 0...45/66 Hz <input type="checkbox"/> Power supply : 12...48 VDC <input type="checkbox"/> Power supply : 100 ... 240 VAC 44/66 Hz + 1 Rechargeable Battery <input type="checkbox"/> Power supply : 24 ... 36 VAC/VDC 0...44/66 Hz + 1 Rechargeable Battery <input type="checkbox"/> Power supply : 12...48 VDC + 1 Rechargeable Battery
Outputs: Pulses/Frequence/Alarms/Batch	<input type="checkbox"/> N°1 digital Output , 1250 Hz, 100mA, 30 Vdc <input type="checkbox"/> N°2 digital Outputs , 1250 Hz, 100mA, 30 Vdc
Analog Output	<input type="checkbox"/> n° 1 Analogue output 0/4...20/22 mA (Hart optional) <input type="checkbox"/> n° 2 Analogue outputs 0/4...20/22 mA (Hart optional over Out.1)
Communication Gateway	<input type="checkbox"/> RS 485 <input type="checkbox"/> Wi-Fi (for programming)
Data Logger	<input type="checkbox"/> MicroSD Memory Card 4...32 GBytes
Protocols	<input type="checkbox"/> Modbus over RS 485 <input type="checkbox"/> HART (Available on analog output n° 1) <input type="checkbox"/> MeterBus
	
ACCURACY	
Measurements tolerance	<input type="checkbox"/> Flow rate (volume) = ±0,05% v.l. <input type="checkbox"/> Out 4/20 mA = ± 0,08 % v.l. <input type="checkbox"/> Frequency Out = ± 0,08% v.l.
Accuracy (whole system converter+- sensor)	<input type="checkbox"/> See table below


OVERALL DIMENSIONS

Compact version

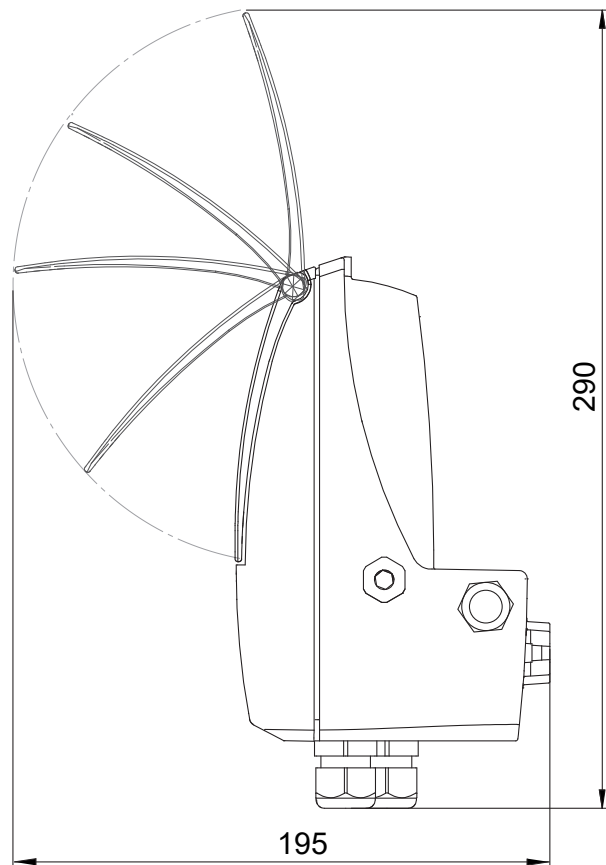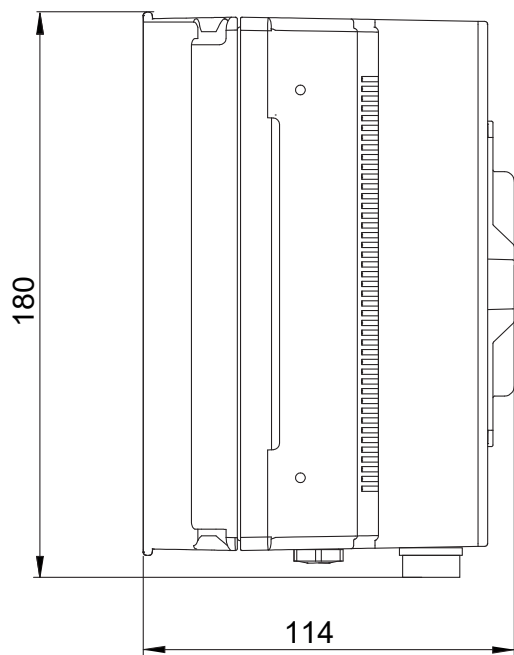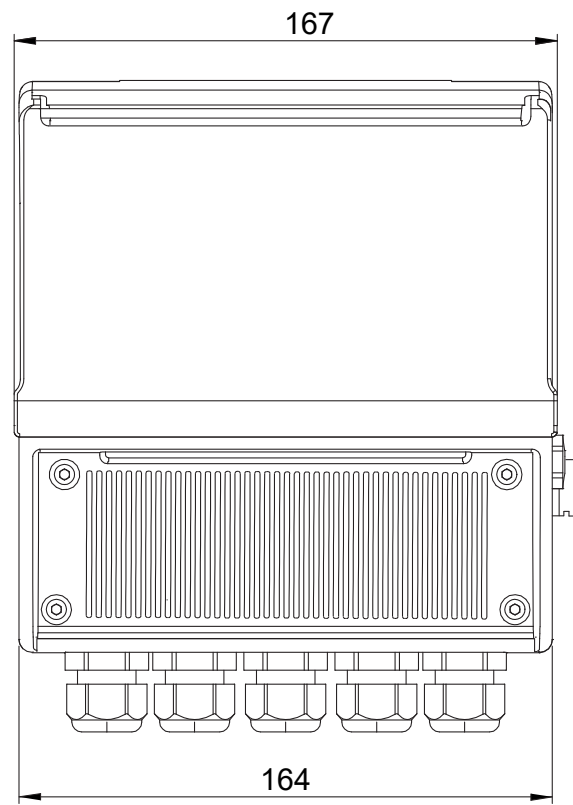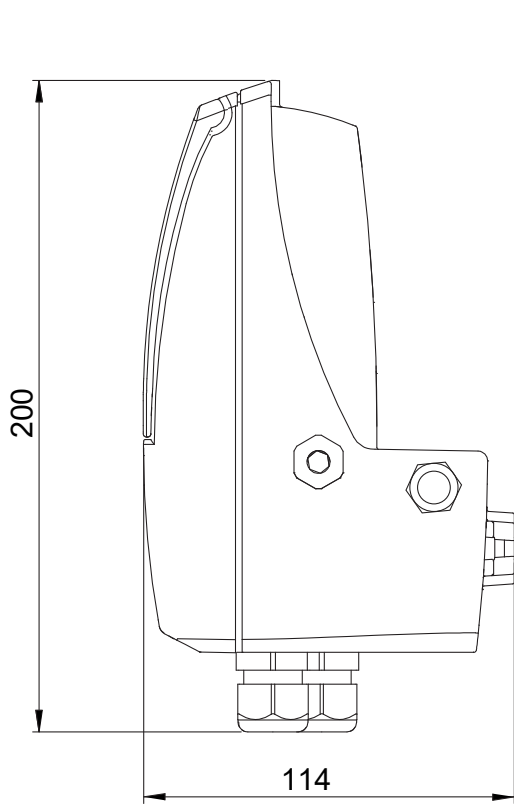


The manufacturer guarantees only English text available on our web site www.isoil.com

Separate (wall) version

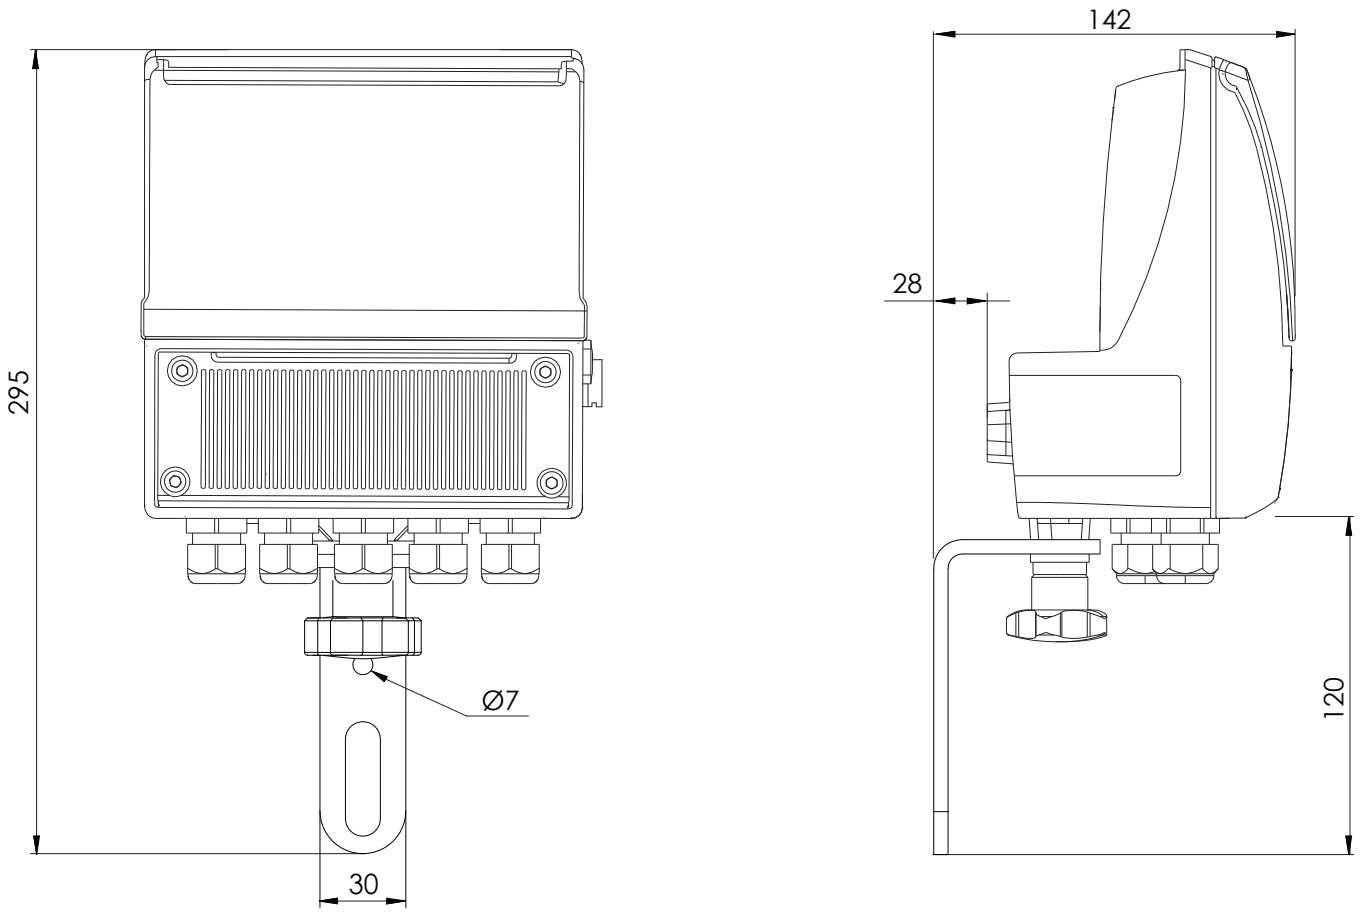


The manufacturer guarantees only English text available on our web site www.isoil.com

Horizontal version




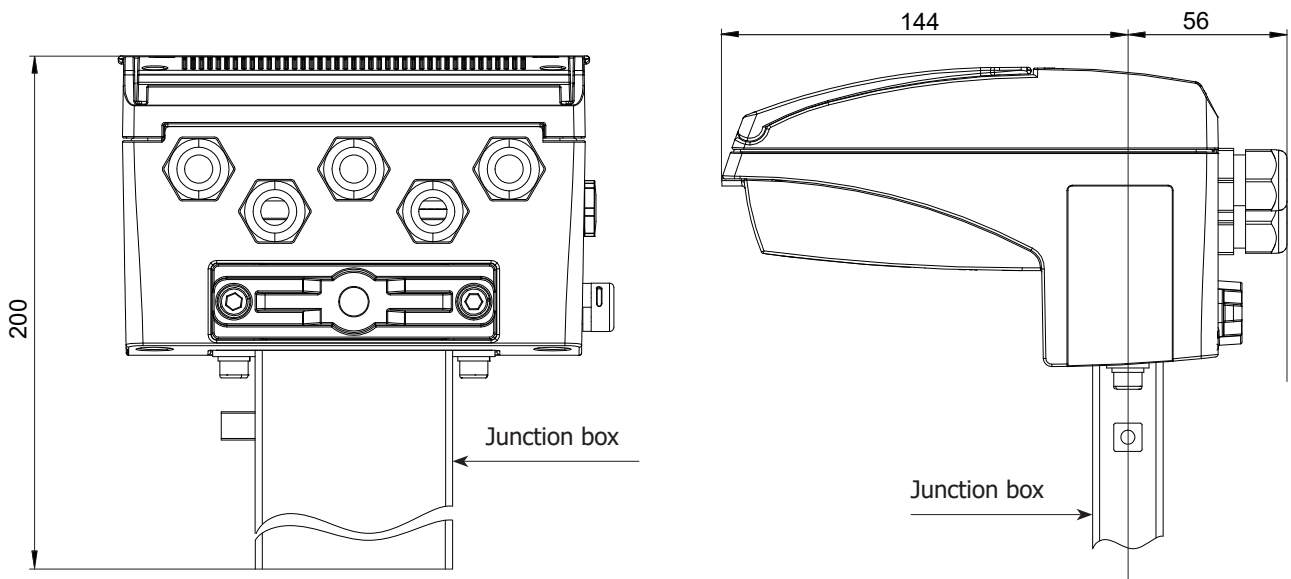


Vertical version

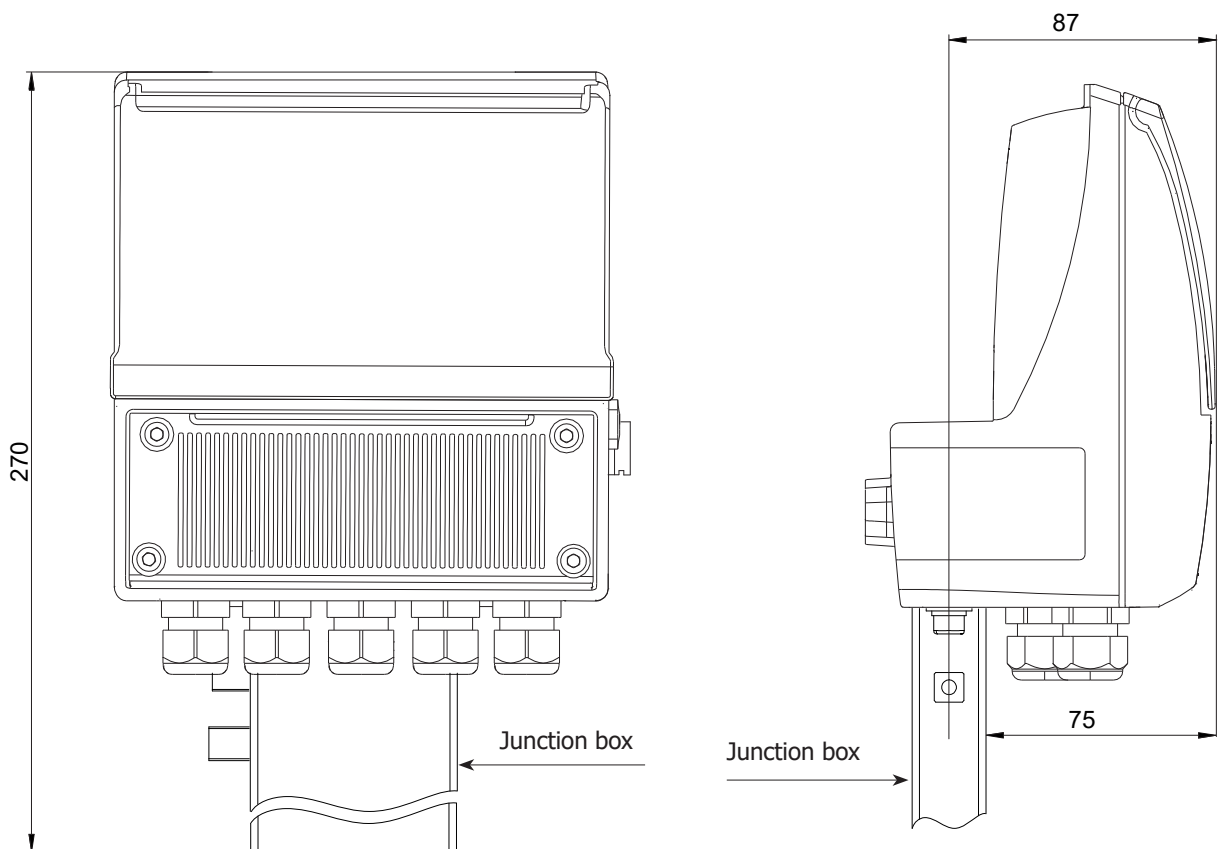





OVERALL DIMENSIONS (STAINLESS STEEL VERSION)

Compact Version

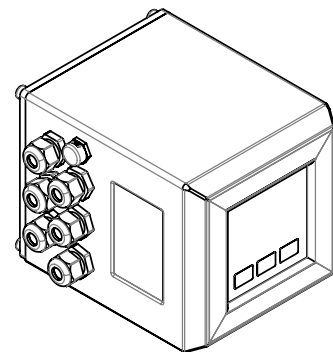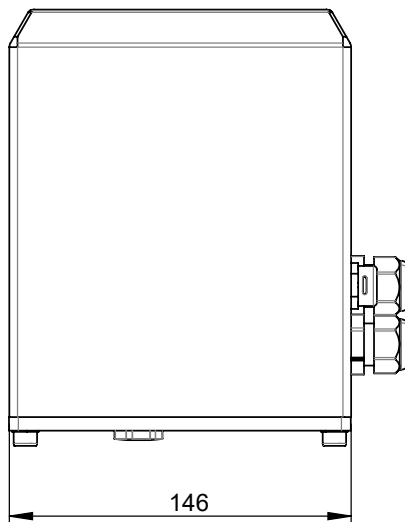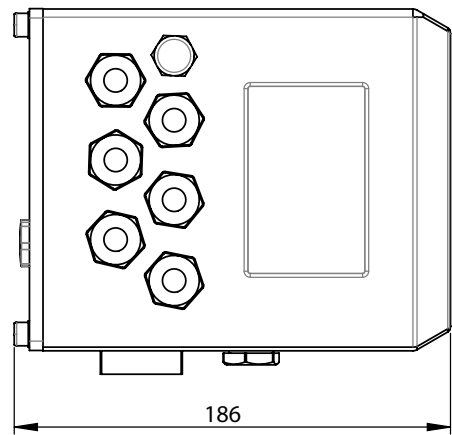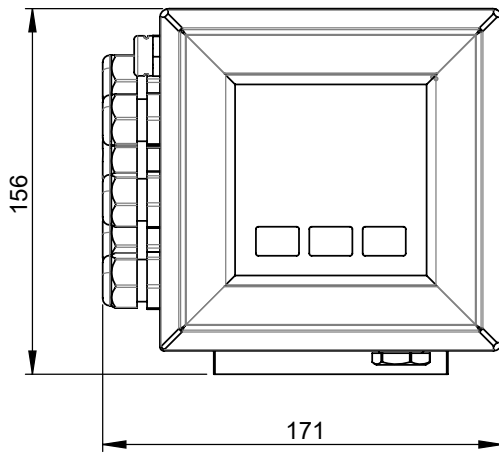


The manufacturer guarantees only English text available on our web site www.isoil.com

Separate Version

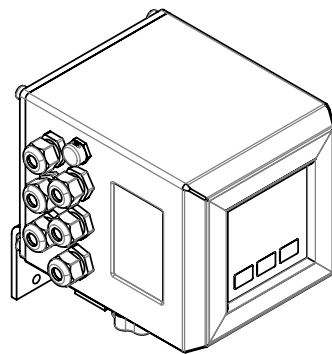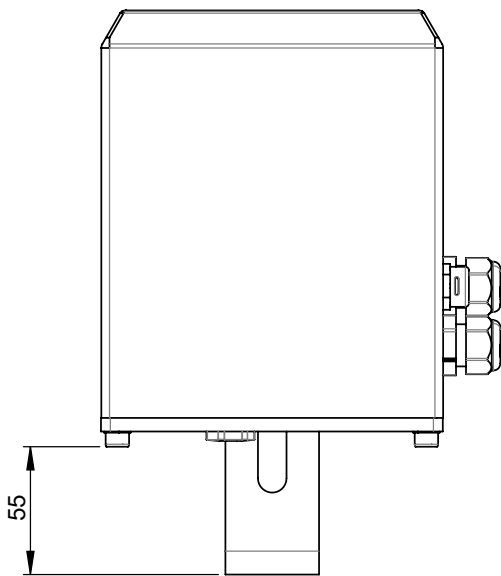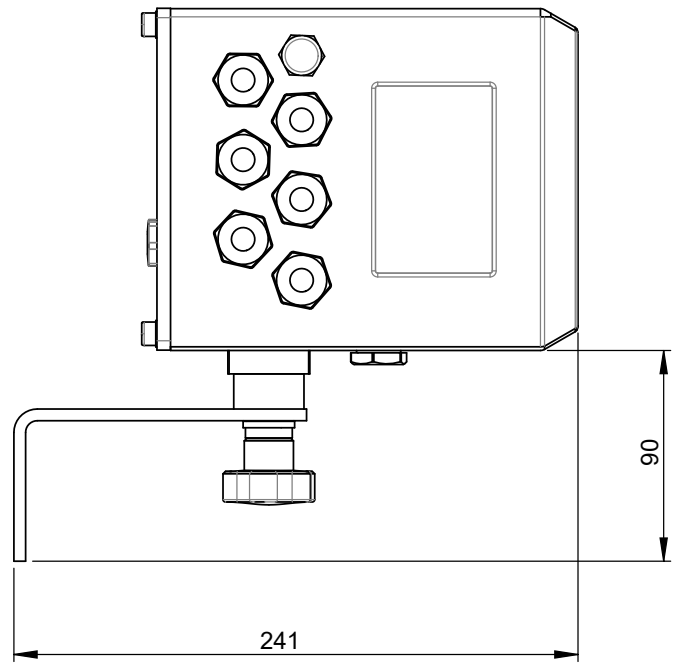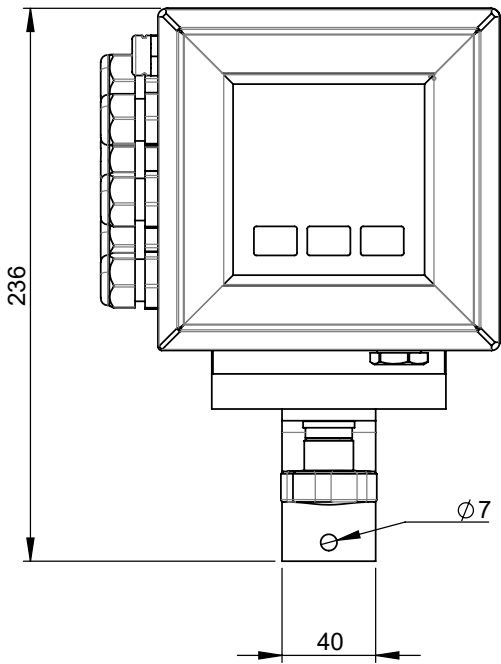


MV210 EXPLODED LAYOUT


TERMINAL BLOCK COVER

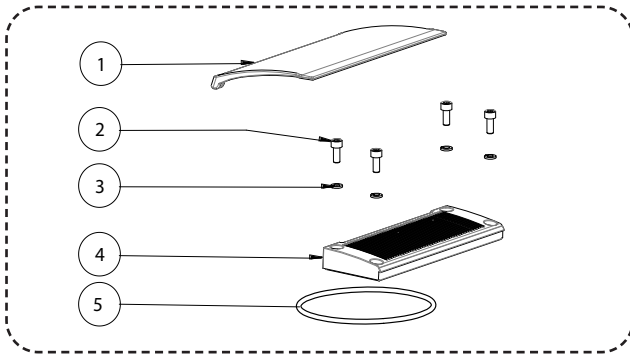


MAIN HOUSING COVER

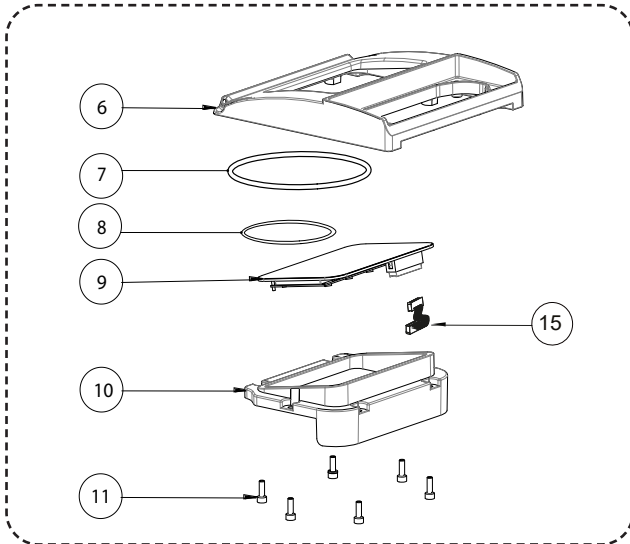

PCB MV210

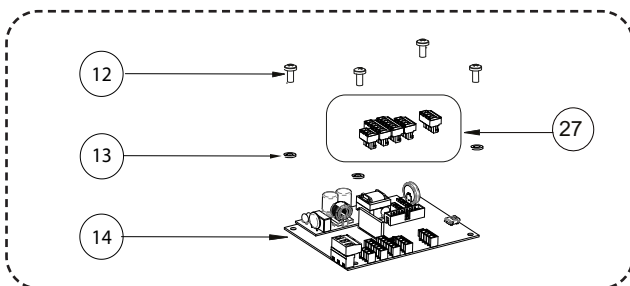


MAIN HOUSING

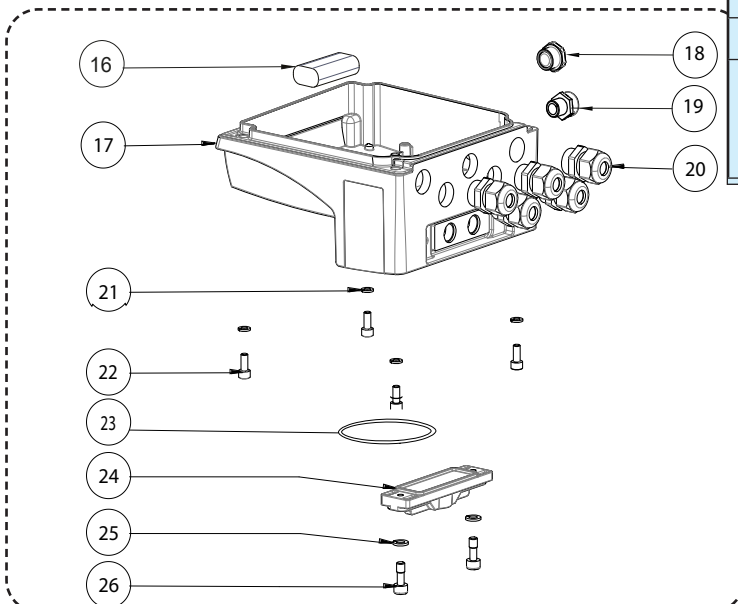

POS.	DESCRIPTION	
	PA6 VERSION	ALLUMINIUM VERSION
1	PROTECTION COVER	
2	VITE M4x12	VITE M5x12
3	GROWER Ø4	GROWER Ø5
4	TERMINAL COVER	TERMINAL COVER
5	O-RING-4400	
6	HOUSING COVER	HOUSING COVER
7	O-RING-4700 (HOUSING COVER)	
8	O-RING-117x3 (DISPLAY)	
9	DISPLAY	
10	FIXING DISPLAY FRAME (MATERIAL PA06)	
11	SELF-TAPPING SCREW 4x10	TRILOBO SCREW 4x10
12	SELF-TAPPING SCREW 4x10	TRILOBO SCREW 4x10
13	GROWER Ø4	SPRING WASHER Ø4
14	PCB MV210	
15	FLAT CABLE	
16	LITHIUM BATTERY	
17	PA6 MAIN HOUSING	ALUMINIUM MAIN HOUSING
18	PG9 CAP	
19	ANTICONDESE CAP	
20	PG11 CABLE GLAND CABLE DIAMETER: Ø5-Ø10mm	
21	GROWER Ø4	SPRING WASHER Ø5
22	SCREW M4x12	SCREW M5x12
23	O-RING-155	
24	VERSION CAP (MATERIAL PA06)	
25	GROWER Ø6	
26	SCREW M6x16	
27	TERMINAL BLOCK SOLID WIRE: 26-16 AWG / 0.129-1.31 mm ² STRANDED WIRE: 26-16 AWG / 0.129-1.31 mm ² TORQUE: 3.0 Lb.In / 0.34 Nm	


MV210 CONSTRUCTION (STAINLESS STEEL VERSION)

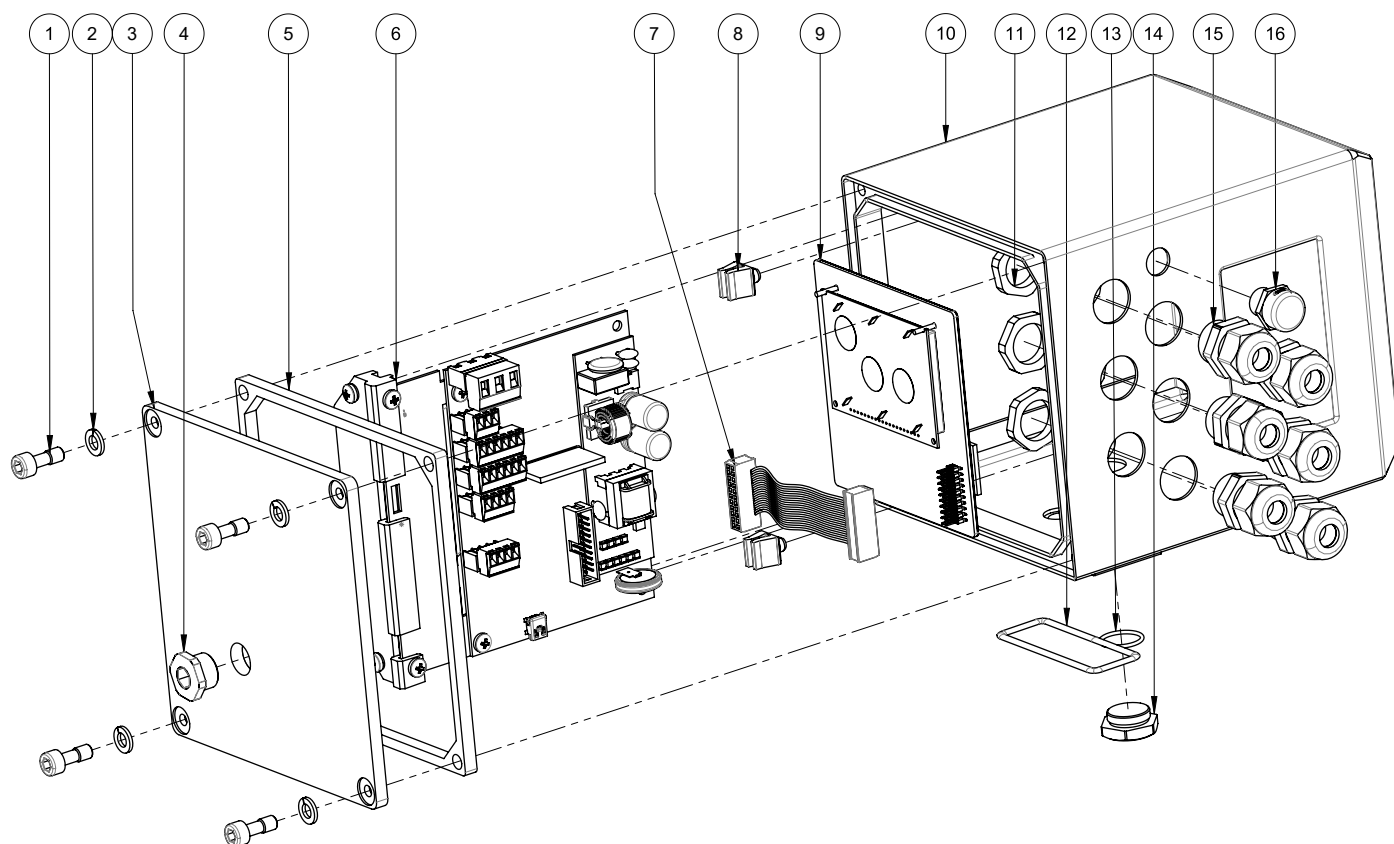

POS.	DESCRIPTION
1	SCREW M6X16
2	GROWER Ø 6
3	POLISHED COVER
4	PG9 CAP IP68
5	GASKET FOR Stainless steel HOUSING
6	BOARD FRAME M3C
7	FLAT CABLE
8	BOARD FIXING CLIPS
9	DISPLAY/BLIND
10	POLISHED Stainless steel HOUSING
11	PG11 NUT
12	FLAT GASKET O-RING 155
13	O-RING ORM 0160-15 Ø16X1.5
14	Stainless steel CAP M18X0.75
15	PG11 CABLE GLANDS
16	ANTICONDENSATION CAP

MAIN PAGES VISUALISATION

Different visualization possibilities by simply pressing of a key.

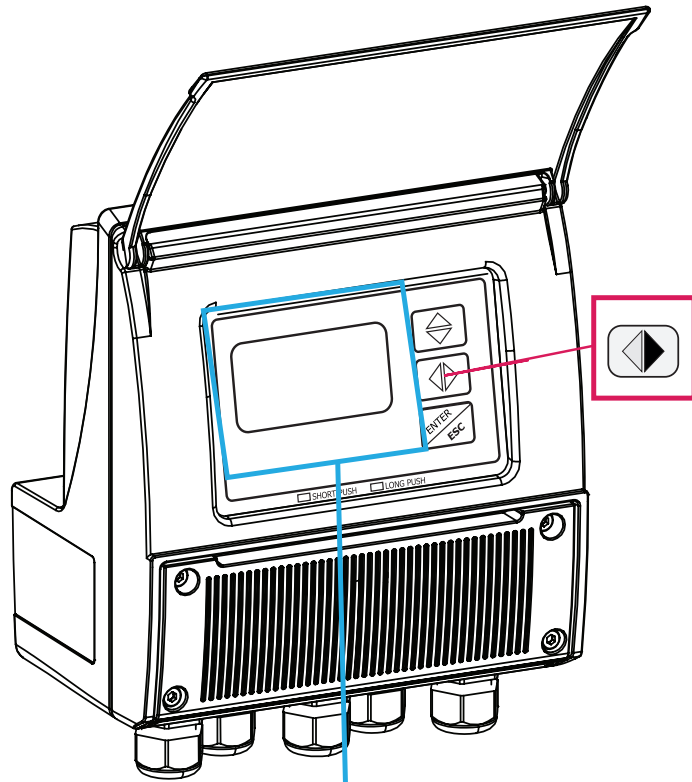


The image shows a vertical sequence of six LCD screen displays, each representing a different visualization mode accessible by pressing a key. The screens are as follows:

- Screen 1:** Shows flow rate in dm^3/s as 0.0000, a percentage error of +0.000%, and a velocity in m/s as +0.000+.
- Screen 2:** Shows a large 0.0000, dm^3/s , +0.00%, and 3 ALARM(S).
- Screen 3:** Shows dm^3/s as 0.0000, cumulative volume $\int \text{dm}^3$ as 0.000, and 3 ALARM(S).
- Screen 4:** Shows dm^3/s as 0.0000 and 3 ALARM(S).
- Screen 5:** Shows $\int \text{dm}^3$ as 0.000 and 3 ALARM(S).
- Screen 6:** Shows error messages: 3 ALARM(S), CLOCK NOT SET, EXCITATION ERROR, and SIGNAL ERROR.

The manufacturer guarantees only English text available on our web site www.isoil.com


ELECTRICAL CONNECTIONS

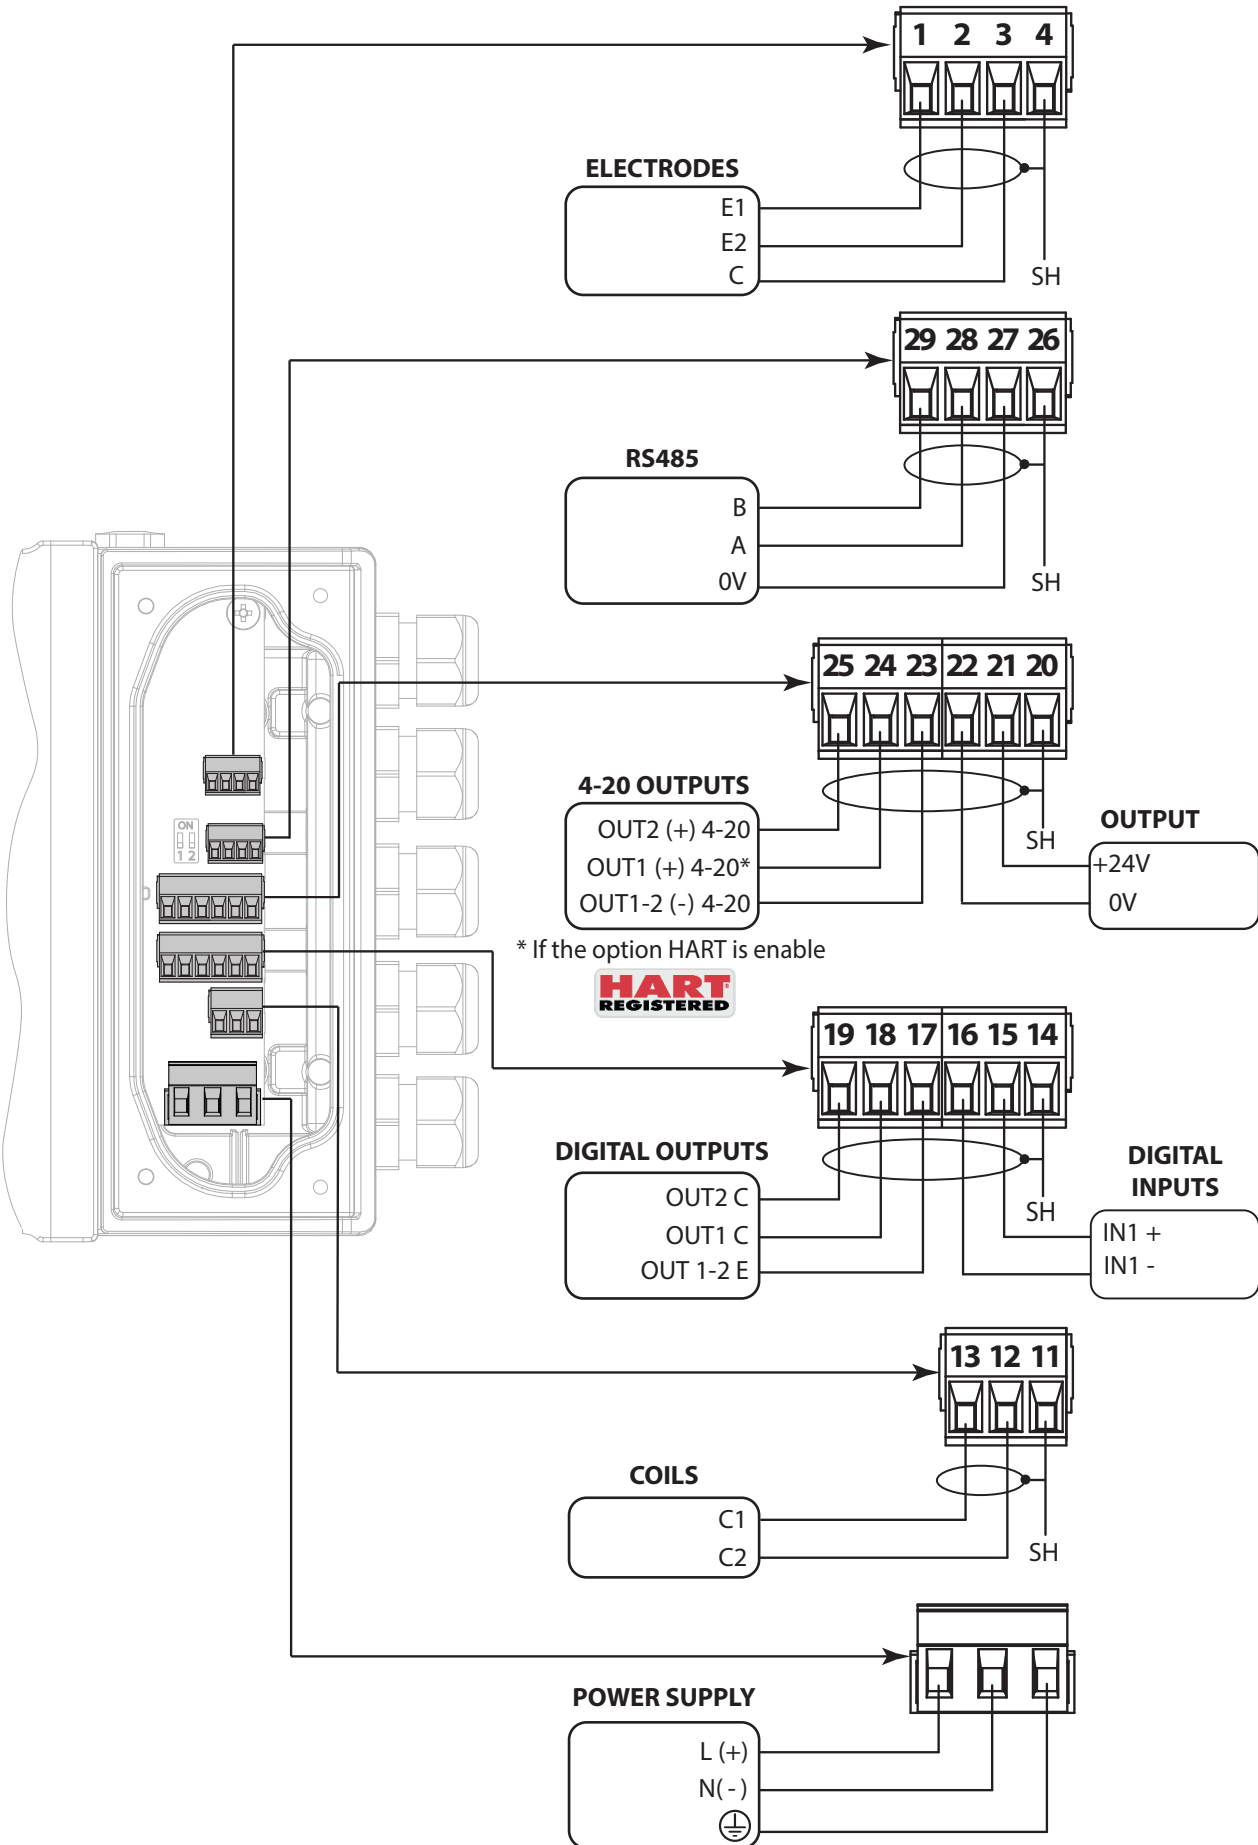


The manufacturer guarantees only English text available on our web site www.isoil.com

DIGITAL INPUT


on/off input
(external power supply)

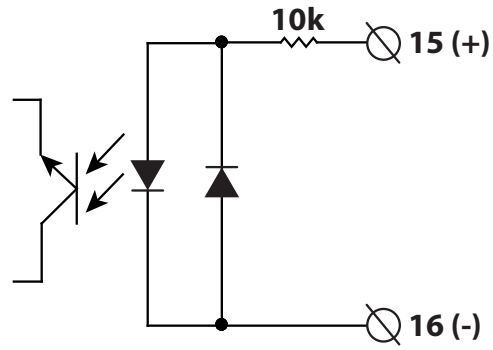


on/off input
(internal power supply)

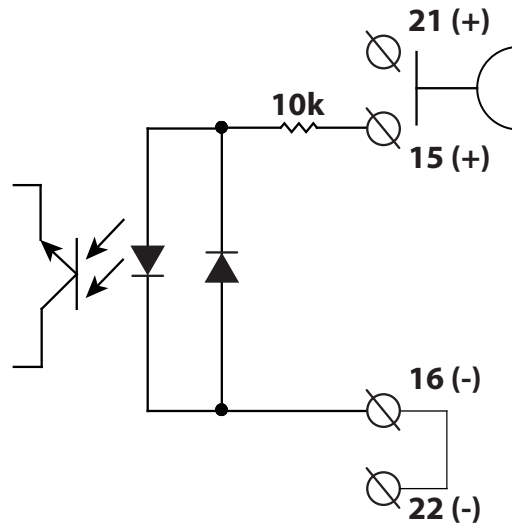

DIGITAL OUTPUTS

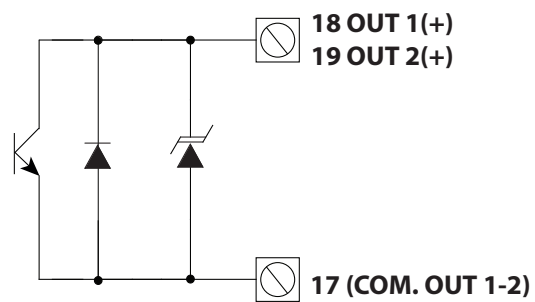

ANALOG OUTPUTS

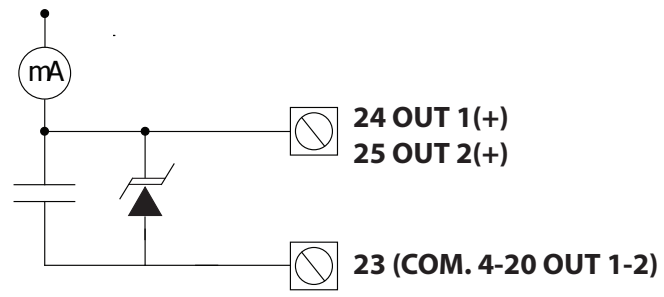

FUNCTIONS MENU

SENSOR

MAIN MENU	
1-Sensor	
2-Units	
3-Scales	
4-Flow	
5-Flow	
6-Flow	
7-Flow	
8-Flow	
9-Flow	
10-Flow	
11-Flow	
12-Flow	
13-Flow	
14-Flow	
15-Flow	
16-Flow	
17-Flow	
18-Flow	
19-Flow	
20-Flow	
21-Flow	
22-Flow	
23-Flow	
24-Flow	
25-Flow	
26-Flow	
27-Flow	
28-Flow	
29-Flow	
30-Flow	
31-Flow	
32-Flow	
33-Flow	
34-Flow	
35-Flow	
36-Flow	
37-Flow	
38-Flow	
39-Flow	
40-Flow	
41-Flow	
42-Flow	
43-Flow	
44-Flow	
45-Flow	
46-Flow	
47-Flow	
48-Flow	
49-Flow	
50-Flow	
51-Flow	
52-Flow	
53-Flow	
54-Flow	
55-Flow	
56-Flow	
57-Flow	
58-Flow	
59-Flow	
60-Flow	
61-Flow	
62-Flow	
63-Flow	
64-Flow	
65-Flow	
66-Flow	
67-Flow	
68-Flow	
69-Flow	
70-Flow	
71-Flow	
72-Flow	
73-Flow	
74-Flow	
75-Flow	
76-Flow	
77-Flow	
78-Flow	
79-Flow	
80-Flow	
81-Flow	
82-Flow	
83-Flow	
84-Flow	
85-Flow	
86-Flow	
87-Flow	
88-Flow	
89-Flow	
90-Flow	
91-Flow	
92-Flow	
93-Flow	
94-Flow	
95-Flow	
96-Flow	
97-Flow	
98-Flow	
99-Flow	
100-Flow	
101-Flow	
102-Flow	
103-Flow	
104-Flow	
105-Flow	
106-Flow	
107-Flow	
108-Flow	
109-Flow	
110-Flow	
111-Flow	
112-Flow	
113-Flow	
114-Flow	
115-Flow	
116-Flow	
117-Flow	
118-Flow	
119-Flow	
120-Flow	
121-Flow	
122-Flow	
123-Flow	
124-Flow	
125-Flow	
126-Flow	
127-Flow	
128-Flow	
129-Flow	
130-Flow	
131-Flow	
132-Flow	
133-Flow	
134-Flow	
135-Flow	
136-Flow	
137-Flow	
138-Flow	
139-Flow	
140-Flow	
141-Flow	
142-Flow	
143-Flow	
144-Flow	
145-Flow	
146-Flow	
147-Flow	
148-Flow	
149-Flow	
150-Flow	
151-Flow	
152-Flow	
153-Flow	
154-Flow	
155-Flow	
156-Flow	
157-Flow	
158-Flow	
159-Flow	
160-Flow	
161-Flow	
162-Flow	
163-Flow	
164-Flow	
165-Flow	
166-Flow	
167-Flow	
168-Flow	
169-Flow	
170-Flow	
171-Flow	
172-Flow	
173-Flow	
174-Flow	
175-Flow	
176-Flow	
177-Flow	
178-Flow	
179-Flow	
180-Flow	
181-Flow	
182-Flow	
183-Flow	
184-Flow	
185-Flow	
186-Flow	
187-Flow	
188-Flow	
189-Flow	
190-Flow	
191-Flow	
192-Flow	
193-Flow	
194-Flow	
195-Flow	
196-Flow	
197-Flow	
198-Flow	
199-Flow	
200-Flow	
201-Flow	
202-Flow	
203-Flow	
204-Flow	
205-Flow	
206-Flow	
207-Flow	
208-Flow	
209-Flow	
210-Flow	
211-Flow	
212-Flow	
213-Flow	
214-Flow	
215-Flow	
216-Flow	
217-Flow	
218-Flow	
219-Flow	
220-Flow	
221-Flow	
222-Flow	
223-Flow	
224-Flow	
225-Flow	
226-Flow	
227-Flow	
228-Flow	
229-Flow	
230-Flow	
231-Flow	
232-Flow	
233-Flow	
234-Flow	
235-Flow	
236-Flow	
237-Flow	
238-Flow	
239-Flow	
240-Flow	
241-Flow	
242-Flow	
243-Flow	
244-Flow	
245-Flow	
246-Flow	
247-Flow	
248-Flow	
249-Flow	
250-Flow	
251-Flow	
252-Flow	
253-Flow	
254-Flow	
255-Flow	
256-Flow	
257-Flow	
258-Flow	
259-Flow	
260-Flow	
261-Flow	
262-Flow	
263-Flow	
264-Flow	
265-Flow	
266-Flow	
267-Flow	
268-Flow	
269-Flow	
270-Flow	
271-Flow	
272-Flow	
273-Flow	
274-Flow	
275-Flow	
276-Flow	
277-Flow	
278-Flow	
279-Flow	
280-Flow	
281-Flow	
282-Flow	
283-Flow	
284-Flow	
285-Flow	
286-Flow	
287-Flow	
288-Flow	
289-Flow	
290-Flow	
291-Flow	
292-Flow	
293-Flow	
294-Flow	
295-Flow	
296-Flow	
297-Flow	
298-Flow	
299-Flow	
300-Flow	
301-Flow	
302-Flow	
303-Flow	
304-Flow	
305-Flow	
306-Flow	
307-Flow	
308-Flow	
309-Flow	
310-Flow	
311-Flow	
312-Flow	
313-Flow	
314-Flow	
315-Flow	
316-Flow	
317-Flow	
318-Flow	
319-Flow	
320-Flow	
321-Flow	
322-Flow	
323-Flow	
324-Flow	
325-Flow	
326-Flow	
327-Flow	
328-Flow	
329-Flow	
330-Flow	
331-Flow	
332-Flow	
333-Flow	
334-Flow	
335-Flow	
336-Flow	
337-Flow	
338-Flow	
339-Flow	
340-Flow	
341-Flow	
342-Flow	
343-Flow	
344-Flow	
345-Flow	
346-Flow	
347-Flow	
348-Flow	
349-Flow	
350-Flow	
351-Flow	
352-Flow	
353-Flow	
354-Flow	
355-Flow	
356-Flow	
357-Flow	
358-Flow	
359-Flow	
360-Flow	
361-Flow	
362-Flow	
363-Flow	
364-Flow	
365-Flow	
366-Flow	
367-Flow	
368-Flow	
369-Flow	
370-Flow	
371-Flow	
372-Flow	
373-Flow	
374-Flow	
375-Flow	
376-Flow	
377-Flow	
378-Flow	
379-Flow	
380-Flow	
381-Flow	
382-Flow	
383-Flow	
384-Flow	
385-Flow	
386-Flow	
387-Flow	
388-Flow	
389-Flow	
390-Flow	
391-Flow	
392-Flow	
393-Flow	
394-Flow	
395-Flow	
396-Flow	
397-Flow	
398-Flow	
399-Flow	
400-Flow	
401-Flow	
402-Flow	
403-Flow	
404-Flow	
405-Flow	
406-Flow	
407-Flow	
408-Flow	
409-Flow	
410-Flow	
411-Flow	
412-Flow	
413-Flow	
414-Flow	
415-Flow	
416-Flow	
417-Flow	
418-Flow	
419-Flow	
420-Flow	
421-Flow	
422-Flow	
423-Flow	
424-Flow	
425-Flow	
426-Flow	
427-Flow	
428-Flow	
429-Flow	
430-Flow	
431-Flow	
432-Flow	
433-Flow	
434-Flow	
435-Flow	
436-Flow	
437-Flow	
438-Flow	
439-Flow	
440-Flow	
441-Flow	
442-Flow	
443-Flow	
444-Flow	
445-Flow	
446-Flow	
447-Flow	
448-Flow	
449-Flow	
450-Flow	
451-Flow	
452-Flow	
453-Flow	
454-Flow	
455-Flow	
456-Flow	
457-Flow	
458-Flow	
459-Flow	
460-Flow	
461-Flow	
462-Flow	
463-Flow	
464-Flow	
465-Flow	
466-Flow	
467-Flow	
468-Flow	
469-Flow	
470-Flow	
471-Flow	
472-Flow	
473-Flow	
474-Flow	
475-Flow	
476-Flow	
477-Flow	
478-Flow	
479-Flow	
480-Flow	
481-Flow	
482-Flow	
483-Flow	
484-Flow	
485-Flow	
486-Flow	
487-Flow	
488-Flow	
489-Flow	
490-Flow	
491-Flow	
492-Flow	
493-Flow	
494-Flow	
495-Flow	
496-Flow	
497-Flow	
498-Flow	
499-Flow	
500-Flow	
501-Flow	
502-Flow	
503-Flow	
504-Flow	
505-Flow	
506-Flow	
507-Flow	
508-Flow	
509-Flow	
510-Flow	
511-Flow	
512-Flow	
513-Flow	
514-Flow	
515-Flow	
516-Flow	
517-Flow	
518-Flow	
519-Flow	
520-Flow	
521-Flow	
522-Flow	
523-Flow	
524-Flow	
525-Flow	
526-Flow	
527-Flow	
528-Flow	
529-Flow	
530-Flow	
531-Flow	
532-Flow	
533-Flow	
534-Flow	
535-Flow	
536-Flow	
537-Flow	
538-Flow	
539-Flow	
540-Flow	
541-Flow	
542-Flow	
543-Flow	
544-Flow	
545-Flow	
546-Flow	
547-Flow	
548-Flow	
549-Flow	
550-Flow	
551-Flow	
552-Flow	
553-Flow	
554-Flow	
555-Flow	
556-Flow	
557-Flow	
558-Flow	
559-Flow	
560-Flow	
561-Flow	
562-Flow	
563-Flow	
564-Flow	
565-Flow	
566-Flow	
567-Flow	
568-Flow	
569-Flow	
570-Flow	
571-Flow	
572-Flow	
573-Flow	
574-Flow	
575-Flow	
576-Flow	
577-Flow	
578-Flow	
579-Flow	
580-Flow	
581-Flow	
582-Flow	
583-Flow	
584-Flow	
585-Flow	
586-Flow	
587-Flow	
588-Flow	

SCALES

```

MAIN MENU
1-Sensor
2-Units
3-Scales
4-Measure
5- Alarms
6- Inputs
7- Outputs
8-
9-
10-
11-
12-
13-
    
```

SCALES	
FS1 g/s	4908.7
B.qty dm3	1.00000
FS2 g/s	4908.7
Pls1=g	1000.00
Tpls1=ms	0050.0
Pls2=g	1000.00
Tpls2=g	0050.0
Frq1=Hz	1000.00
Frq2=Hz	1000.00

3.1	Full scale flow rate 1
3.2	Batching quantity
3.3	Full scale flow rate 2
3.4	Pulse value on channel 1
3.5	Duration of the pulse generated on channel 1
3.6	Pulse value on channel 2
3.7	Duration of the pulse generated on channel 2
3.8	Full scale frequency for channel 1 (0.1Hz-1000.0Hz)
3.9	Full scale frequency for channel 2 (0.1Hz-1000.0Hz)

MEASURES

```

MAIN MENU
1-Sensor
2-Units
3-Scales
4-Measure
5- Alarms
6- Inputs
7- Outputs
8-
9-
10-
11-
12-
13-
    
```

MEASURES	
Damping	SMART
Cut-off= %	00.1
DT Min.	ON
T1HC enable	ON
T1HC	OFF

4.1	Measure filter
4.2	Low flow zero threshold: 0-25% of full scale value
4.3	Automatic calibration verify
4.4	Automatic change of measurement range
4.5	High immunity inputs

ALARMS

```

MAIN MENU
1-Sensor
2-Units
3-Scales
4-Measure
5- Alarms
6- Inputs
7- Outputs
8-
9-
10-
11-
12-
13-
    
```

ALARMS	
Max+ = dm3/s	OFF
Max- = dm3/s	OFF
Min+= dm3/s	OFF
Min-= dm3/s	OFF
Hysteresis=%	03
mA v. alarm=%	000
Hz v. alarm=%	000

5.1	Maximum value alarm set for direct flow rate
5.2	Maximum value alarm set for reverse flow rate
5.3	Minimum value alarm set for direct flow rate
5.4	Minimum value alarm set for reverse flow rate
5.5	Hysteresis threshold set for the minimum and maximum flow rate alarms
5.6	Current output value in case of failure
5.7	Frequency output value in case of alarms

INPUTS

```

MAIN MENU
1-Sensor
2-Units
3-Scales
4-Measure
5- Alarms
6- Inputs
7- Outputs
8-
9-
10-
11-
12-
13-
    
```

INPUTS	
T+ reset	OFF
P+ reset	OFF
T- reset	OFF
P- reset	OFF
Count lock	OFF
Meas.lock	OFF
Calibration	OFF
Range change	OFF

6.1	Total direct (positive) flow totalizer reset enable
6.2	Partial direct (positive) flow totalizer reset enable
6.3	Total reverse (negative) flow totalizer reset enable
6.4	Partial reverse (negative) flow totalizer reset enable
6.5	Totalizer counting lock command
6.6	Measure zero lock command
6.7	Calibration external command
6.8	Range change external command

OUTPUTS

```

MAIN MENU
1-Sensor
2-Units
3-Scales
4-Measure
5-Alarms
6-Inputs
7-Outputs
8-Communication

```

```

10-
11-
12-
13-
OUTPUTS
Out1          PULSES+
Out2          PULSES-
Out mA1       4_22 +/-
Out mA2       4_22 +/-
A1S           4.9087
A2S           4.9087

```

7.1	Output 1 functions
7.2	Output 2 functions
7.3	Choice of the function and the range of current output n.1
7.4	Choice of the function and the range of current output n.2
7.5	Full Scale value for analog out1
7.6	Full Scale value for analog out2

COMM.

```

MAIN MENU
1-Sensor
2-Units
3-Scales
4-Measure
5-Alarms
6-Inputs
7-Outputs
8-Communication
9-Display

```

```

1-
2-
COMMUNICATION
HART pr.      05
HART O. C.    0N
Dev. Addr     001
Speed=bps     9600
Parity=       NO
Delay=ms      00
C. timeout    2
MBUS ID =     220483
MBUS Dev.T =  7

```

8.1	HART packet byte preambles
8.2	HART bus output control
8.3	Device communication address number
8.4	MODBUS link speed
8.5	MODBUS link parity
8.6	MODBUS reply delay
8.7	Maximum delay between chars (frames)
8.8	MeterBus Id.Number (Second.Add.)
8.9	MeterBus Device Type (Media)



DISPLAY

```

MAIN MENU
1-Sensor
2-Units
3-Scales
4-Measure
5-Alarms
6-Inputs
7-Outputs
8-Communication
9-Display
10-Data logger
11-Functions
12-
13-
DISPLAY
Language      EN
Contrast      5
Disp.time=s   020
D.rate=Hz     5
Disp. Fn.     1
Disp.lock     0N
Part. Tot.    0N
Neg. Tot.     0N
Net tot.      0N
Disp.date     0N
Quick start   0N

```

9.1	Choice of the language
9.2	Display contrast
9.3	Display/keyboard inactivity time
9.4	Display updating frequency: 1-2-5-10 Hz
9.5	Display function number
9.6	Display function selection lock
9.7	Partial totalizer enable
9.8	Negative totalizer enable
9.9	Net totalizer enable
9.10	Time and date display enable
9.11	Quick start menu visualization

DATA LOGGER

DATA LOGGER

D.logger en.	ON	10.1	Data logger enabling
Meas. units	ON	10.2	Measure units recording enable
Field separat.	;	10.3	Field separator character
Decimal separat.	.	10.4	Decimal separator character
Interv.	01:01:00	10.5	Sampling interval
Log T+	ON	10.6	Enable logging of total direct totalizer
Log P+	ON	10.7	Enable logging of partial direct totalizer
Log T-	ON	10.8	Enable logging of total reverse totalizer
Log P-	ON	10.9	Enable logging of partial reverse totalizer
Log TN	ON	10.10	Enable logging of total net totalizer
Log PN	ON	10.11	Enable logging of partial net totalizer
Log Q (UM)	ON	10.12	Enable logging of flow rate in measure unit
Log Q (%)	ON	10.13	Enable logging of flow rate in percentage
Log AL.EV	ON	10.14	Enable logging of alarm events
Log STR	ON	10.15	Enable logging of sensor test results
Log BTS	ON	10.16	Enable logging of board temperature
Log IBV	ON	10.17	Enable logging of internal board voltage
Log EDC	ON	10.18	Enable logging of electrodes DC voltage
Log EAC	ON	10.19	Enable logging of electrodes AC voltage
Log EIZ	ON	10.20	Enable logging of electrodes impedance
Log SCU	ON	10.21	Enable logging of sensor coils value

```

M
10-Data logger
11-Functions
12-Diagnostic
13-System

```

FUNCTIONS

FUNCTIONS

T+ reset		11.1	Execute immediate reset of total direct totalizer
P+ reset		11.2	Execute immediate reset of partial direct totalizer
T- reset		11.3	Execute immediate reset of total reverse totalizer
P- reset		11.4	Execute immediate reset of partial reverse totalizer
Load Sens. F. def		11.5	Load sensor factory default
Load Conv. F. def		11.6	Load converter factory default
Save Sens. F. def		11.7	Save sensor factory default values
Save Conv. F. def		11.8	Save converter factory default values
Calibration		11.9	Execute immediate internal circuit calibration

```

M
11-Functions
12-Diagnostic
13-System

```

DIAGNOSTIC

DIAGNOSTIC

Self test		12.1	Self test diagnostic function
Test display		12.2	Function tests physical display
Sens. verify		12.3	Sensor verify diagnostic function
Flow sim. =	ON	12.4	Flow rate simulation enabling
Display measures		12.5	Display internal measured value
Disp. Comm. Vars		12.6	Display comm. diagnostic values
Display graphs		12.7	Display measure as graphs
Gen. sens. set		12.8	Generic sensor parameters set
SD card info		12.9	Sd card status informations
Firmware info		12.10	Firmware version/revision
S/N=	999001	12.11	Board serial number
WT=	002:21:00 : 22	12.12	Total working time

```

M
12-Diagnostic
13-System

```


SYSTEM

```

SYSTEM
Dayl. Saving =          ON
Time zone =           h+01.00
2016/04/04-16:07
L1 code =             *****
L2 code =             *****
L3 code =             *****
L4 code =             *****
L5 code =             *****
L6 code =             *****
Restr. Access=        ON
010.011.012.013
010.011.012.014
255.255.255.000
HT                    0.96469
HS                    1.00000
HR                    1.00000
DAC1                  (°C)
DAC1                  (°C)
DAC2                  661
DAC2                  3327
Stand-by              3453
FW update             14718
13-1 Daylight saving time change
13-2 Localized time zone
13-3 System date and time
13-4 Access level 1 code
13-5 Access level 2 code
13-6 Access level 3 code
13-7 Access level 4 code
13-8 Access level 5 code
13-9 Access level 6 code
13-10 Restricted access level
13-11 Device IP network address
13-12 Client IP network address
13-13 Network mask
13-14 Calibration coefficient KT
13-15 Calibration coefficient KF
13-16 Calibration coefficient KR
13-17 DAC1 out 4mA calibration point
13-18 DAC1 out 20mA calibration point
13-19 DAC2 out 4mA calibration point
13-20 DAC2 out 20mA calibration point
13-21 Stand-by
13-22 firmware update
MAI
10-Data logger
11-Functions
12-Diagnostic
13-System

```

ACCURACY

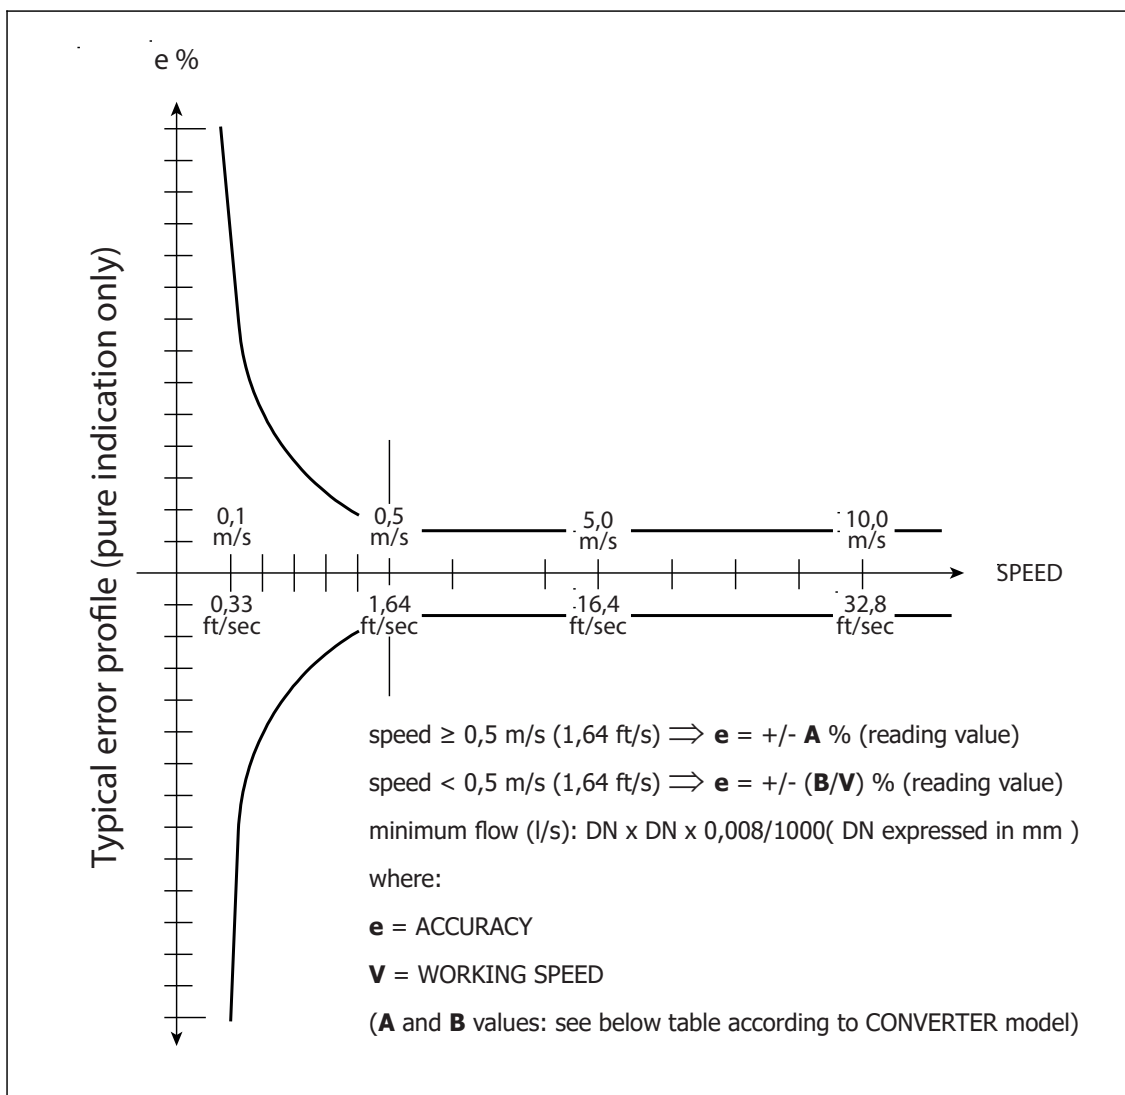

Full bore sensor

MS501/MS1000/MS2410/MS2500			MS 600			MS5000		
A	B(m/s)	B(ft/s)	A	B(m/s)	B(ft/s)	A	B(m/s)	B(ft/s)
0,2	0,1	0,66	0,4	0,2	1,32	2	1	3,28


Insertion sensors

See sensors DATA SHEET

Reference conditions below and as per internal testing procedures:

- Constant flow rate during the test
- Pressure: >30 Kpa
- Flow condition : fully developed flow profile
- Zero stability $\pm 0,005 \%$

HOW TO ORDER

CODE/ EXAMPLE	CODE/DESCRIPTION	
Display		
A	A	Blind version (without display and programming keys, cable USB type A/USB MINI B is REQUIRED TO PROGRAMMING)
	B	Graphic LCD WSTN - B/W - back light display, point matrix 128 x 64, 8 line/16 characters and 3 programming keys (mandatory for MI001)
Housing material / Protection rate		
0	0	Nylon PA6 with fiber glass, protection rate IP 67
	1	Painted aluminum die casting, protection rate IP67
	2	Painted aluminum die casting, protection rate IP68 1,5 meters under water, Compact Version, n° 1 IP 68 MIL connector for power supply (CONNECTORS SUPPLIED: MALE + FEMALE)
	3	Painted aluminum die casting, protection rate IP68 1,5 meters under water, Compact Version, Complete of n° 1 of 10 poles IP68 MIL connector (outputs connections to be specified) and n° 1 IP 68 MIL connector for power supply (CONNECTORS SUPPLIED: MALE + FEMALE)
	4	Painted aluminum die casting, protection rate IP68 1,5 meters under water, Separate Version, Complete of n° 2 IP 68 MIL connectors for cables from the sensor and n° 1 IP 68 MIL connector for power supply (CONNECTORS SUPPLIED: MALE + FEMALE)
	5	Painted aluminum die casting, protection rate IP68 1,5 meters under water, Separate Version, Complete of n° 2 IP 68 MIL connectors for cables from the sensor, n° 1 of 10 poles IP68 MIL connector (outputs connections to be specified) and n° 1 IP 68 MIL connector for power supply (CONNECTORS SUPPLIED: MALE + FEMALE)
	6	AISI304 Stainless Steel housing, protection rate IP67 (DISPLAY NOT ROTABLE) - NO CONNECTORS AVAILABLE
	7	Painted aluminum die casting, ONLY COMPACT, protection rate IP68 (NO CONNECTORS)
Version		
A	A	Compact version with sensor MS.... (liquid maximum temperature 100 °C)
	B	Separate version for wall mounting, complete with mounting accessories (CABLE C015/C016)
	C	Compact version with display visible from the top
	D	Separate version (CABLE C014) for wall mounting, complete with mounting accessories in AISI 304
Power supply		
1	1	Power supply : 100 ... 240 VAC 44/66 Hz
	2	Power supply : 24 ... 36 VAC/VDC 0...44/66 Hz
	3	Power supply : 12...48 VDC
	4	Power supply : 100 ... 240 VAC 44/66 Hz + 1 Rechargeable back-up Battery (the use of battery supports only the measure UP TO 15 days; all the outputs are set to OFF)
	5	Power supply : 24 ... 36 VAC/VDC 0...44/66 Hz + 1 Rechargeable back-up Battery (the use of battery supports only the measure UP TO 15 days; all the outputs are set to OFF)
	6	Power supply : 12...48 VDC + 1 Rechargeable back-up Battery (the use of battery supports only the measure UP TO 15 days; all the outputs are set to OFF)
	7	Power supply : 100 ... 240 VAC 44/66 Hz + n° 1 SETTINGS FOR Rechargeable back-up Battery (the Rechargeable Battery is NOT included)
	8	Power supply : 24 ... 36 VAC/VDC 0...44/66 Hz + n° 1 SETTINGS FOR Rechargeable back-up Battery (the Rechargeable Battery is NOT included)
	9	Power supply : 12...48 VDC + n° 1 SETTINGS FOR Rechargeable back-up Battery (the Rechargeable Battery is NOT included)
	a	Power supply : 100 ... 240 VAC 44/66 Hz + 1 Pack of n° 2 SUPERCAP (the use of it supports only the measure UP TO 3 minutes; all the outputs are set to OFF)
	b	Power supply : 24 ... 36 VAC/VDC 0...44/66 Hz + 1 Pack of n° 2 SUPERCAP (the use of battery supports only the measure UP TO 3 minutes; all the outputs are set to OFF)
	c	Power supply : 12...48 VDC + 1 Pack of n° 2 SUPERCAP (the use of battery supports only the measure UP TO 3 minutes; all the outputs are set to OFF)
	Analogue output 	
A	A	Without Analogue output
	B	n° 1 Analogue output 0/4...20/22 mA (Hart optional)
	C	n° 2 Analogue outputs 0/4...20/22 mA (Hart optional over Out.1)

Digital Input/Output		
0	0	With Digital Input only
	1	With n° 1 PROGRAMMABLE Digital Output/n°1 Digital Input
	2	With n° 2 PROGRAMMABLE Digital output/n°1 Digital Input
Communication Gateway		
A	A	Without Gateway
	B	RS485 port - Protocol MODBUS required
	C	Hart (4/20 mA/ Analog OUT n° 1 is required)
	D	Wi-Fi (for programming)
	E	M-Bus Module
	Z	Others
Protocols		
0	0	Without Protocol
	1	Modbus (over RS485) requires RS485 port
Accuracy		
A	A	Standard accuracy 0,2 %
	C	Special accuracy (to be defined)
Data Logger		
0	0	Without Data Logger
	1	MicroSD Memory 4 GB : Data Logger + RTC (Real Time Clock)
	2	MicroSD Memory 4 GB : Data Logger + RTC (Real Time Clock) + BIV (Built In Verificator)
	3	MicroSD Memory 4 GB : Data Logger + RTC (Real Time Clock) + Meter Data (Real Time Converter & Sensor Data on SD Memory)
	4	MicroSD Memory 4 GB : Data Logger + RTC (Real Time Clock) + BIV + Meter Data
Special Features		
A	A	NONE
	B	WITH ANTICONDENSE CAP
	C	n° 5 CABLE GLAND 1/2" NPT - Nickel plated brass CODE 1.609.1200.70 (CABLE 6 - 12 mm)
	D	n° 5 HOLES FOR CABLE GLAND 1/2" NPT (WITHOUT CABLE GLAND)

Complete code
example for
order



MV210-A0A1A0A0A0A

ISOIL INDUSTRIA S.p.A.

HEAD OFFICE	SERVICE
Via Fratelli Gracchi, 27 20092 Cinisello Balsamo (MI) Tel +39 02 66027.1 Fax +39 02 6123202 sales@isoil.it	isomagservice@isoil.it

If you want to find the complete list of our distributors access at the following link:

<http://www.isoil.it/en>



Due to the constant technical development and improvement of its products, the manufacturer reserves the right to make changes and/or modify the information contained in this document without notice.